


ADAM Sp. z o.o.

Morska 9A biuro@adam.com.pl PL 84-230 Rumia adam.com.pl tel. / fax. +48 58 / 671 38 35 1"(25mm)
DEFLECTION
X SPRING SERIES
SEISMIC MOUNTS



DATA SHEET DS-05A

TYPE

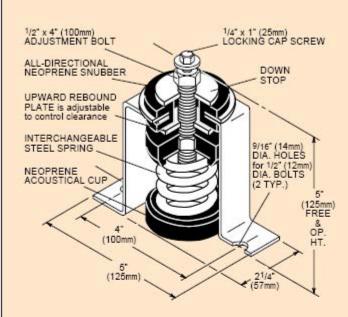

Mounts are galvanized.

TYPE SSLFH RATINGS


Size	Rated Capacity (lbs) (kgs)	Rated Defl (in) (mm)	Mount Constant (lbs/in) (kg/mm	Spring) Color	Max Horiz Static G Rating*
SSLFH-X-23 SSLFH-X-33	23 10 33 15	1.30 33	18 0.31 30 0.54	Brown Red	15.7 10.9
SSLFH-X-54	54 25	1.20 30	45 0.82	White	6.7
SSLFH-X-76	76 35	1.02 26	73 1.33	Black	4.7
SSLFH-X-113	113 51	1.00 25	113 2.05	Yellow	3.2
SSLFH-X-130	130 59	1.00 25	130 2.36	Purple	2.8
SSLFH-X-175	175 79	1.00 25	175 3.20	Silver	2.1
SSLFH-X-210	210 95	1.00 25	210 3.82	Blue	1.7

^{*}Horizontal G Ratings are for quick reference only— Use OSHPD Rated Load Curves.

SPRING DATA

Size	Spring OD (in)(mm)	Free Height (in)(mm)	Ratio Kx/Ky	Ratio OD/OH
23-130	11/2 38	23/8 60	0.86-1.00	1.09-1.40
175-210	11/2 38	25/8 66	0.75	0.92-1.00

OSHPD R-0199 Rated Load Curves (lbs kg)†

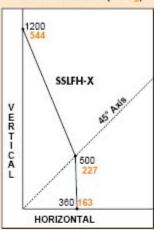

*For kN divide kg by 102

Horizontal and Vertical plotted Ratings are California OSHPD approved values having the OSHPD Anchorage Preapproval Number R-0199. Testing and calculations were performed to meet OSHPD criteria.

To use approved OSHPD rated load curves:

Calculate Vertical and Horizontal Forces on mountings including translations and overturning moments.
 Plot Horizontal Load vs Vertical Load. The point must fall within the area below the OSHPD curve.

INSTALLATION INSTRUCTIONS:

- Remove locking cap screws and place mountings under holes in equipment base.
- 2. Shim mountings level before securing.
- In all mounting locations, pass cap screws through holes in equipment base and screw loosely into leveling bolts.
- Take two full counter-clockwise turns on each leveling bolt and continue even adjustment of all mounts until all springs are loaded and mountings are back to Free and Operating Height.
- Take no more than two additional counter-clockwise turns on any leveling bolt to level equipment.
- 6. Tighten cap screws to secure equipment.
- Adjust plates so there is 1/8" (3mm) clearance between top of plate and underside of all-directional neoprene cushion. Turn rebound plates clockwise to lower or counter-clockwise to raise.